
DATASHEET

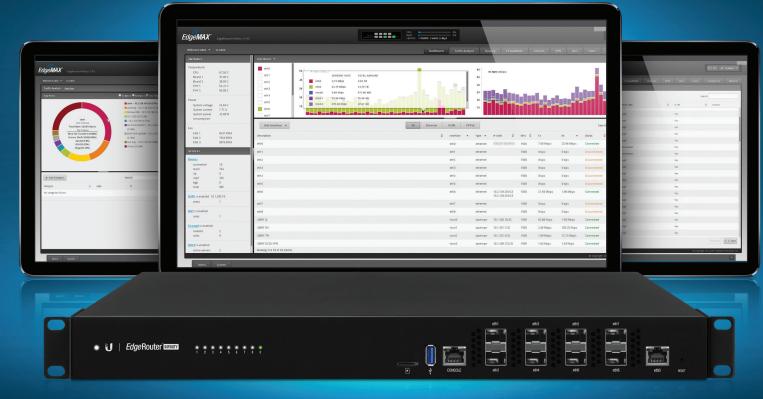

U | EdgeRouter Land

Edge Router INFINITY

8-Port 10G SFP+ Router

Model: ER-8-XG

80 Gbps Aggregate Throughput

10G Ethernet SFP+ Ports

Hot-Swappable Modular Power Supplies





10G Routing Technology for the Masses

Ubiquiti Networks introduces the EdgeRouter[™] Infinity, the next evolution of the EdgeMAX® platform. The EdgeRouter Infinity combines 80 Gbps aggregate throughput and price/performance value in a compact rackmountable form factor.

Maximum Performance

Powered by a 16-core, 1.8 GHz processor with 16 GB DDR4 RAM, the EdgeRouter Infinity features eight 10G SFP+ ports and a Gigabit Ethernet RJ45 port for routing.

Advanced Applications

Powerful routing features – such as load balancing and failover– provide redundancy and increased performance for your network.

Redundant Power

The EdgeRouter Infinity uses a hot-swappable modular power supply. It includes primary and backup AC/DC power supply modules, so it automatically switches over to the backup if the primary power supply fails.

Management System

The EdgeRouter Infinity is supported and managed by the Ubiquiti[®] Network Management System. UNMS[™] is a comprehensive management controller featuring a graphic UI that is easy to navigate. You can use a single control plane to manage registered EdgeMAX devices across multiple networks and sites.


Mobile App

The UNMS app allows you to manage the EdgeRouter Infinity using your mobile device. The app can be downloaded from the App Store (iOS) or Google Play[™] (Android).

Once the UNMS app is installed on your mobile device, simply connect to a wireless network that has access to the EdgeRouter, discover the EdgeRouter, and log into its configuration interface.

You can display and configure various settings, such as interface information, throughput per port, system settings, and more.

Example of Enterprise Deployment

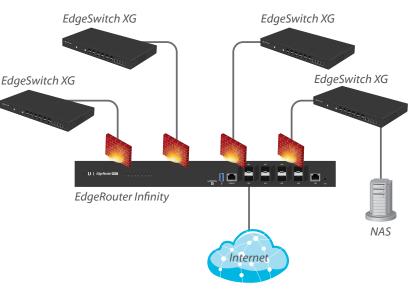

The EdgeRouter Infinity connects to multiple 10G EdgeSwitch® XG units.

Ubiquiti Network Management System

											? U USDO dem	
sh.	ALL (500)	ACTIVE (477) DISCONNECTED (13)		DISABLED (4) UP	AUTHORIZED (6)	HORIZED (6) ADD DEVICE	DOWNLOAD BACKUPS		UPGRADE DEVICES FIRMWARE		Search	
		STATUS	NAME	VERSION	MODEL 1	UPTIME	LAST SEEN	CPU	SIGNAL	ASSIGNED TO	ACTIONS	
•	(100000)-	DISCONNECTED	Icepen_Boulevard_1	1.9.2	CP-516		11h ago			Kujgad_Circle_17	>> MOVE	
3-60	(•IIII)	ACTIVE	Zunu_Avenue_10	19.2	EP-516	2m 49s	now	-	20%	Herman_20	» MOVE 🖒 RESTART	
	•IIIIII	ACTIVE	Tegob_Drive_14	19.2	EP-516	8m 12s	now		2%	Ohsiz_Parkway_19	» MOVE 🖒 RESTART	
	•IIII	ACTIVE	Hoog_Ridge_9	1.9.2	EP-516	7m 52s	now	-	11%	Helen_15	» MOVE 🖒 RESTART	
	•IIII	ACTIVE	Ajza_Court_3	1.9.2	EP-516	8m 12s	now		19%	Lella_6	» MOVE 🕐 RESTART	
		ACTIVE	Lude_River_2	1.9.2	ER-8	1m 28s	now	-	11%	Francisco_19	» MOVE 🕐 RESTART	
		ACTIVE	Pirve_Street_14	1.9.2	CR-8	8m 53s	now		2%	Cameron_19	» MOVE () RESTART	
		ACTIVE	Libfun_Loop_17	1.9.2	ER-8	271	now	-	10%	Miguel_6	» MOVE () RESTART	
		ACTIVE	Mirid_Highway_5	19.2	ER-8	7m 12s	now	_	19%	Luzguk_Extension_12	» MOVE () RESTART	
		ACTIVE	Howa_Grove_17	19.2	ER-8	3óm 37s	now	-	19%	Raymond_16	» MOVE 🖒 RESTART	
		ACTIVE	Morud_Point_17	19.2	ER-8	9m 13s	now	_	18%	Leo_13	» MOVE () RESTART	
		ACTIVE	Tera_Ridge_2	1.9.2	ER-8	4m 9s	now		9%	Loretta_9	» MOVE () RESTART	
*		ACTIVE	Zotju_Boulevard_2	1.9.2	CR-8	9m 54s	now		19%	Blake_14	» MOVE () RESTART	
P		ACTIVE	Asza_Center_5	1.9.2	ER-8-XG	10m 15s	now	-	10%	Iwjo_Path_7	» MOVE () RESTART	
۲		ACTIVE	Nubva_Lane_2	19.2	ER-8-XG	8m 53s	now		5%	Jeanette_0	» MOVE () RESTART	
•		ACTIVE	Nihjo_Plaza_10	1.9.2	ER-8-XG	13m 16s	now		7%	Farry_19	» MOVE () RESTART	
		ACTIVE	Pavag_Loop_14	19.2	ER-8-XG	28m 6s	now		2%	Bictan_Court_9	» HOVE 🖑 RESTART	
o,		ACTIVE	Ovauz_Loop_18	19.2	ER-8-XG	13m 16s	now		7%	Jula_7	» MOVE () RESTART	
~		(ACTIVE)	Wazely, Boulevard, B	192	ER-8-XG	1m 8s	now		12%	Helena, 18	> MOVE () RESTART	

Use UNMS to register and manage multiple EdgeMAX devices.

UNMS Mobile App



Use the UNMS app for management and monitoring from a mobile device.

*Edge*Router[®] INFINITY

DATASHEET

Intuitive User Interface

The EdgeRouter Infinity features a graphical user interface designed for convenient setup and control. Accessed via a network port and web browser, the interface provides intuitive management with a virtual view of the ports, displaying physical connectivity, speed, and status.

Manage Your Network

DHCP Server Set up multiple DHCP servers to assign IP ranges in different subnets on the different interfaces.

Easily control dynamic and static IP addressing for your network devices.

Monitoring Tools Conveniently track network activity and devices from tools such as *Ping*, *Trace*, *Discover*, *Packet Capture*, and *Log Monitor*.

Secure Your Network

Firewall Policies Organize the rules you apply in the order you specify.

Firewall Groups Apply the policies to groups filtered by IP address, network address, or port number.

NAT Rules The EdgeRouter changes packet addressing based on your customized source and destination NAT rules.

Direct Traffic Flow

Interfaces Each 10G SFP+ port functions as an independent interface. You can also configure Virtual Local Area Network (VLAN) interfaces for network segmentation.

Routing Configure static routes and dynamic routing protocols (OSPF, RIP, BGP, and MPLS) to effectively manage the routes used by the EdgeRouter.

Powerful Features

The robust EdgeRouter Infinity offers additional features, including:

- Application identification with Deep Packet Inspection (DPI)
- Quality of Service (QoS)
- Administrator and operator accounts
- Comprehensive IPv6 support

Configuration by CLI

The CLI provides quick and flexible configuration by command line and direct access to standard Linux tools and shell commands. CLI access is available through the serial console port, SSH, Telnet, and the graphical UI.

		advant Traffic de	alyss an	ring tirouth	14.87	anviers V	rw QeS		utigaree Wineds				
subarr		Interfaces =											Hide Disclassion
ompensive CPU Buard 1 Deard 2 PHY11 PHY12 Vouer System volkage System ourset System power consumption	67.50 C 37.00 C 39.00 C 54.47 C 65.00 C 24.84 V 1.71 A 42.00 W	e30 e81 e81 e83 e83 e85 e85 e85 e85	50	F07AC AMOUNT 20218 322710 47165480 75.5563 27.4798			8 8 8 8 9						
in .	8437 8944 7520 8944 9675 8944	Add Interface *			All Diter	THE VLAN	PPPoL					Search	
FARE 1 FARE 2 FARE 3		Deserption				0 interface	а туре а	IP AMY 0	MTH 0	74	E A	sames ©	Artists
		etv0				end	ebend	10.174.014	1500	7.08 Maps	25.96 Mbps	Connected	Adless *
ervices		ent				eni	ethernet		1500	Obps	Obps	Disconnected	· REITA
hauncu		wh1				eth2	ethernet		1500	Obps	Obps	Disconnected	Action *
connected static	16 764	en.)				enj	ethernet		1500	Obps	0.895	Disceneded	Adless *
ep exel	0 200	eni				eni	ethernet		1500	0 kp s	Daps	Disconnected	Action *
hgp 1004	9	mh5				ens	ethernet		1500	Ohps	Obps	Disconnected	Action *
set is enabled 10.1		e2v6				ethá	ellernel	102.12825423 102.12825423	1500	21.93 Mbps	1.96 Maps	Concelled	Autors *
areas	1	eth7				eth7	ethernet		1500	Obps	Obpu	Disconnected	Adden *
NAT is enabled rates		etr0				end	ethernet		1500	Ohps	Obps	Disconnected	Adlets *
	1	UBWT S				19409	openypn	10.1.200 16/32	1500	63.60183.05	1.95 M0p1	Connected	A BINDA
raimets	,	UBWT SH				vitan I	openvpn	10.1.201.1/32	1500	2.65 Maps	183.32 Hitps	Connected	Action -
raies	9	UBNT TW				Lutra L	openopri	10.1.201.4/32	1500	1.89 Mags	12.74 Mbps	Connected	Adless *
HCP is enabled		UBWT DC02 VPW				viun3	opervpn	10.1.200.122/32	1500	1.6388ps	1.631895	Connected	A01616 ¥
adive servers	1	showing 1 to 12 of 12 estres											2016 Ubipati Networks, Inc.

The Dashboard screen displays detailed statistics: IP information, MTU, transmit and receive speeds, and status for each interface.



The Traffic Analysis screen displays status information about the traffic traveling through the EdgeRouter, including the local hosts and types of network traffic.

				Douting Eironalithat Serv		
Routes 01H						
+ Add Static Route		Al Suric Connected	RIP CSPF			Search
leterated © Description	Destination	- Nexi Hap	0 interface	C Assis Type	0 1078	0 Actives
fes .	10.1.200.6/32	10.1.200.15	vituri0	espt	Yes	
res	10.1.200.7/20	93.1.201.3	znunz	+spf	Yes	
vs.	10.1.200.0/32	10.1.200.15	vrunó	haro	Yes	
res	10.1.200.10/32	10.1.200.15	vitued	here	Yes	
ies.	10.1.208.13/32	93.1.300.15	vounó	vipl	Yes	
ws	10.1.208.15/32		vouno	connected	Vez	
8	10.1.200.16/32		vitued	convected	Yes	
čes.	16.1.206.18/32	95.1.200.15	vitured	hyre	Yes	
fes.	10.1.200.20/32	10.1.200.15	vtun0	ant	Yes	
res	10.1.200.24/32	99.1.200.15	vouno	ospf	Yes	
res	10.1.208.25/32	93.1.300.15	virunó	aqut	Yes	
w	10.1.200.26/32	10.1.200.15	vtun0	aqui	Yes	
8	10.1.208.27/32	90.1.200.15	viuno	here	Yes	
wi .	10.1.206.29/32	93.1.200.15	vouno	ospf	Yes	
in .	10.1.200.30/32	10.1.200.15	vrun0	hpro	Yes	
'es	10.1.200.34/32	90.1.200.121	viun3	rapi	Yes	
res.	10.1.200.34/32	93.1.200.15	vound	oupt	Yes	
res .	10.1.200.36/32	10.1.200.15	vouno	ospf	Yes	
res	10.1.208.38/32	93.1.200.15	visued	hyro	Yes	
bowing 1 to 100 of 283 erenies						Previous 1 2 3 Next

The Routing > Routes screen displays static, connected, RIP, and/or OSFP routes. You can add static routes on this screen.

Hardware Overview

Ports

The EdgeRouter Infinity features eight SFP+ ports for fiber connectivity and an RJ45 port for copper connectivity. A serial console port is available for CLI management (also accessible through the browser-based interface).

- (8) 10G SFP+ Ports
- (1) RJ45 Gigabit Ethernet Port
- (1) RJ45 Serial Console Port

Power Options

The EdgeRouter Infinity includes two AC/DC 100W power supplies.

If it detects failure of the primary PSU, then the backup automatically activates to supply uninterrupted power.

The AC/DC module is also sold separately as model RPS-AC-100W.

You also have the option to use a DC/DC PowerModule[™], model RPS-DC-100W (sold separately):






ER-8-XG Front Panel



ER-8-XG Back Panel

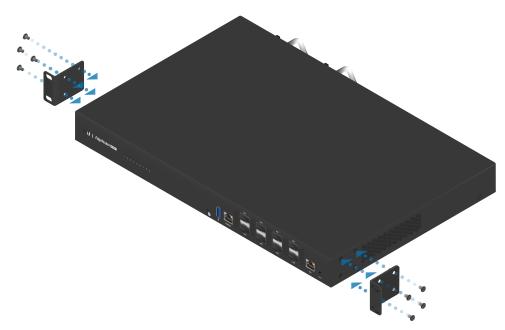

Attaching Rack-Mount Brackets to the EdgeRouter Infinity

Edge Router INFINITY

Hardware Specifications

	ER-8-XG
Dimensions	442.4 x 285.6 x 43.7 mm (17.42 x 11.24 x 1.72")
Weight Without Mount With Mount	4.950 kg (10.91 lb) 5.045 kg (11.12 lb)
Enclosure Characteristics	SGCC Steel
Max. Power Consumption	100W
Power Method	Hot-Swappable AC/DC or DC/DC* Power Supply Module
Supported Voltage Range AC/DC Power Supply Module DC/DC Power Supply Module	100 to 240VAC, 24VDC Output 38 to 54VDC, 24VDC Output
Button	Reset
LEDs System SFP+ Data Ports RJ45 Data Port	Status Link/Activity Link/Activity
Ports Serial Console Port Data Ports	(1) RJ45 Serial Port (8) SFP+ Ports (1) RJ45 Gigabit Ethernet Port
Layer 3 Forwarding Performance Packet Size: 64 Bytes Packet Size: 1514 Bytes	18,000,000 pps 80 Gbps (Line Rate)
Processor	MIPS64 16 Core 1.8 GHz with Hardware Acceleration for Packet Processing
System Memory	16 GB DDR4 RAM
On-Board Flash Storage	8 MB NOR Flash 4 GB eMMC NAND Flash
Certifications	CE, FCC, IC
Rackmount	Yes, 1U
ESD/EMP Protection	Air: ± 24 kV, Contact: ± 24 kV
Operating Temperature	-5 to 40° C (23 to 104° F)
Operating Humidity	5 - 95% Noncondensing

* DC/DC power supply module not included.





Router Software Specifications

	EdgeOS
Interface/Encapsulation	Ethernet 802.1q VLAN PPPoE GRE IP in IP Bridging Bonding (802.3ad)
Addressing	Static IPv4/IPv6 Addressing DHCP/DHCPv6
Routing	Static Routes OSPF/OSPFv3 RIP/RIPng BGP (with IPv6 Support) IGMP Proxy MPLS
Security	ACL-Based Firewall Zone-Based Firewall Application Identification with Deep Packet Inspection (DPI) NAT
VPN	IPSec Site-to-Site and Remote Access OpenVPN Site-to-Site and Remote Access PPTP Remote Access L2TP Remote Access PPTP Client
Services	DHCP/DHCPv6 Server DHCP/DHCPv6 Relay Dynamic DNS DNS Forwarding VRRP RADIUS Client Web Caching PPPoE Server
QoS	FIFO Stochastic Fairness Queueing Random Early Detection Token Bucket Filter Deficit Round Robin Hierarchical Token Bucket Ingress Policing
Management	Web UI Ubiquiti Network Management System (UNMS) CLI (GUI, Console, SSH, Telnet) SNMP NetFlow LLDP NTP UBNT Discovery Protocol Syslog

Specifications are subject to change. Ubiquiti products are sold with a limited warranty described at: www.ubnt.com/support/warranty ©2017 Ubiquiti Networks, Inc. All rights reserved. Ubiquiti, Ubiquiti Networks, the Ubiquiti U logo, the Ubiquiti beam logo, EdgeMAX, EdgeOS, EdgeRouter, EdgeSwitch, PowerModule, and UNMS are trademarks or registered trademarks of Ubiquiti Networks, Inc. in the United States and in other countries. Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Android, Google, Google Play, the Google Play logo and other marks are trademarks of Google Inc. All other trademarks are the property of their respective owners.

